

ADJUSTABLE FRAME

INSTRUCTION SHEET




- 1** Screw the three-section telescoping poles onto bases.



- 2** Assemble horizontal poles by attaching male to female ends. Once assembled, the notches should be at each end.



- 3** Slide graphics over top and bottom crossbar.

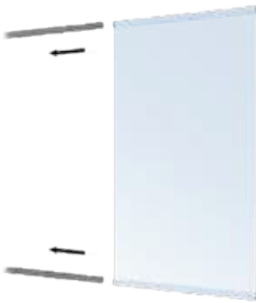

- 4** Secure top and bottom crossbars to vertacle poles using knobs provided. Raise verticle telescopic poles until the graphic is taut, then twist the cam to lock.

